

# KH108

## Polyurethane Hot Melt

### Description

Krylex KH108 is a one component reactive polyurethane hot melt. It is solid at room temperature. After being applied warm the product will cool to allow immediate handling. Upon further exposure to ambient humidity Krylex KH108 will achieve high strength bonds and excellent environmental resistance.

### *Cure Speed Curve*

The below curve is for reference only. The cure speed is dependent on temperature, humidity and substrate choice. Please contact your local sales representative for assistance and recommendations regarding this product.

### Product Features

- High strength.
- Suitable for bonding metal and plastic, especially for ABS, PC.
- Low application temperatures (105°C-120°C).
- Excellent heat resistance and solvent resistance.
- Excellent high temperature and low temperature resistance.

### Technical Features


#### *Typical Uncured Properties*

Color:	Light white foggy solid
Solid Content:	100%
Specific Gravity @ 25°C	1.1
Viscosity (Brookfield HBTD 10rpm)	@120°C 4000±1000cp @100°C 6000±1000cp
Open Time (1mm line):	3 minutes
Application Temperature:	105°C-120°C

Cured condition: 25°C; 50%-70%RH

Substrates: fiber sheet & fiber sheet

Strength: Tensile Shear Strength.

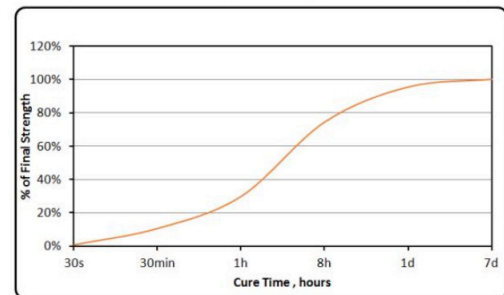

#### *Typical Cured Properties*

Coefficient of Thermal Expansion:	170.3µm/ (mK)
Coefficient of Thermal Conductivity:	0.28 W/ (mK)
Specific Heat:	2.80KJ/ (Kg.K)
Elongation, at break:	>500%
Tensile Modulus:	>400MPa
Tensile Strength:	>8.5 MPa
Tensile Shear Strength:	>7.6 Mpa



CHEMENCE®

# KH108

## Polyurethane Hot Melt

### Instructions for Use

For best results, ensure parts are clean, dry and free from oil and grease, although good bonds can still be achieved on 'as received' or slightly oily parts. The temperature of substrate should not be lower than 20°C. Low temperature will shorten the open time and cause the bonding failure. If needed, pre-heating of the substrate is recommended. Dispense bead of product onto substrate. Mate opposite substrate within recommended open time. Allow for handling strength to be achieved.

### Storage

Optimal storage conditions are between 15°C to 30°C and stored in original sealed foil bag. Storage outside this temperature range can adversely affect product properties and may reduce the stated shelf life.

### General Information

For safe handling of this product consult the Safety Data Sheet.

### Notes

The data contained in this data sheet may be reported as typical value and/or range. Values are based on actual test data and area verified on a regular basis.

Information presented herein has been compiled from sources considered to be accurate and reliable, but is not guaranteed to be so. Nothing herein shall be considered as recommending practices or products in violation of any patent, law or regulation. It is the user's responsibility to determine the suitability of any material for a specific purpose and to adopt such safety precautions as may be necessary. WE MAKE NO WARRANTIES REGARDING THE PRODUCTS AND DISCLAIM ALL EXPRESS OR IMPLIED WARRANTIES, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

**CHEMENCE®**